

Movement Tag

How can I change the batteries of my Movement Tag ?

The Movement Tag requires a Lithium CR2430 / 3V battery to operate and take measures.

To change the battery, you need to remove the rubber case and the top of your Movement Tag. make sure to insert the battery in the right orientation, the bottom of your battery (-) being the contact zone with the connectors.



Unique solution ID: #1606

Author: Admin FAQ

Last update: 2014-11-18 09:53