


Motion Ball

How I can change the Motion Ball batteries ?

The Motion Ball functions with 3 Lithium CR2450 / 3V batteries.

To change the batteries, unscrew the Motion Ball counter-clockwise. Insert the batteries with the - side facing the connectors. Screw back up.

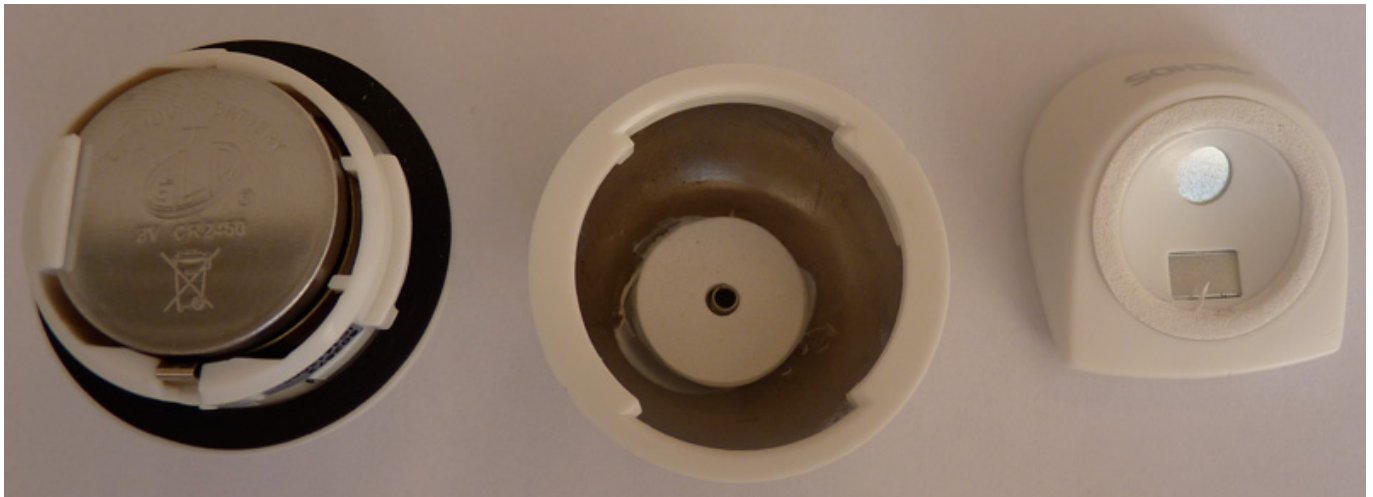

Unique solution ID: #1644

Author: Admin FAQ

Last update: 2014-11-18 09:58