



 
 
















Specific by device

[ArcBook] What do the keyboard buttons correspond to?

The ARCHOS ArcBook has different buttons that allow a quick access to functions.

 /  Brightness setting	 /  Volume setting
 /  /  Previous track / Play-Pause / Next track	 opens the MappingTool application
 Activate / deactivate WiFi connection	 Airplane mode: turn off all wireless communications
 Silent mode: turn off the volume	 Notifications button: displays notifications
 Back button	 Search button
 Launch your default Web browser	 Launch the Google Play™ store
 To delete the selected item	 Menu button
 Home button	 Recent apps button

Specific by device

Unique solution ID: #1687

Author: Admin FAQ

Last update: 2014-11-18 10:12