

ARCHOS Smart Home app

How can I change or disconnect an accessory?

To change or delete an accessory, on your ARCHOS Smart Home, select the

Accessories tab  on the left . Select accessory, a contextual menu is displayed :

Rename	1
Unpair	2
Rooms	3
Connection	4

1. Rename your accessory (only in the application)

2. Disconnect your accessory from your tablet

3. Link an accessory to a room


4. See the connection status of your accessory

You can also disconnect an accessory from the Bluetooth® parameters in the

settings of your tablet. Go to  **Settings** >  **Bluetooth**.

Select the accessory you want to unpair as shown below. You can also rename your accessory but this renaming will only appear in the Android interface, not in the ARCHOS Smart Home application.

ARCHOS Smart Home app

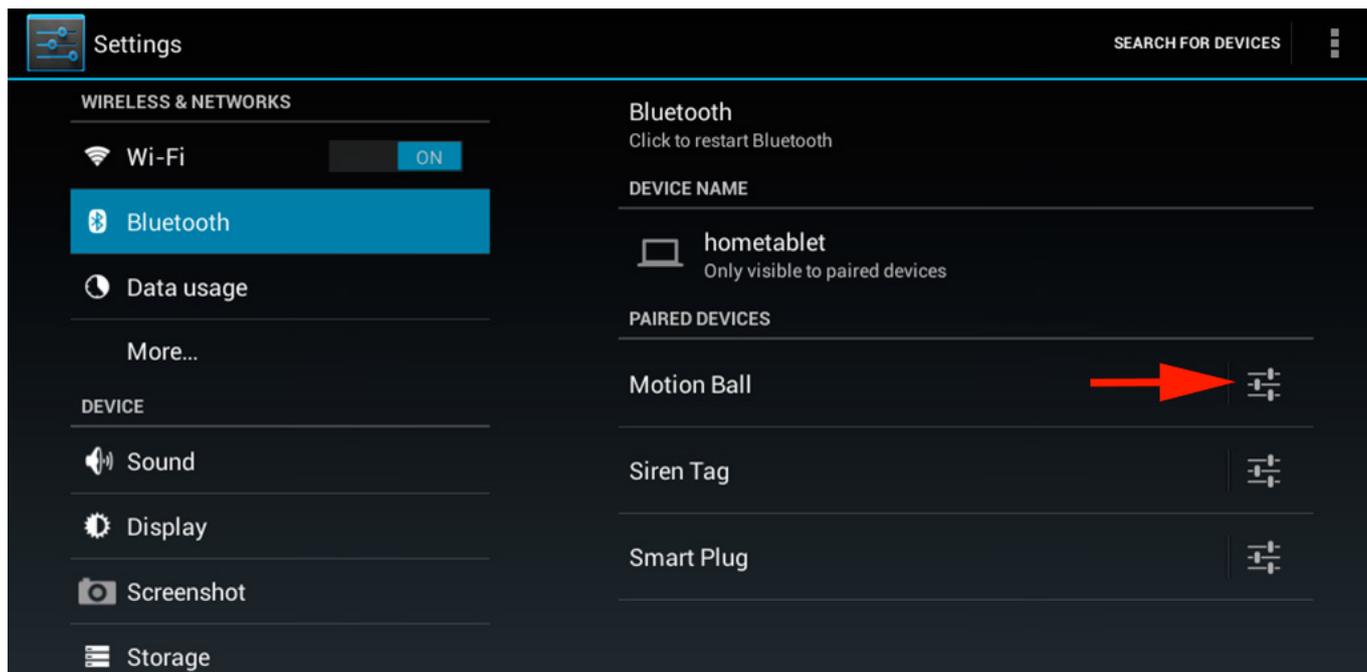

Unique solution ID: #1408
Author: Admin FAQ
Last update: 2014-10-15 15:02