

Archos Fusion Storage

Why can't I see my micro-SD card as an external device on my computer?

When ARCHOS Fusion Storage is activated, your computer and your device identify only one storage which combines your internal storage and the micro-SD card.

To have access to your micro-SD card, [deactivate](#) ARCHOS Fusion Storage.

Unique solution ID: #1806

Author: Admin FAQ

Last update: 2015-06-10 12:02