



Archos Fusion Storage

How can I disable ARCHOS Fusion Storage?

To disable ARCHOS Fusion Storage, select **Settings**  > **ARCHOS Fusion Storage** .

Select Disable ARCHOS Fusion Storage.

If you confirm, your device will reboot.

After the restart, you may need to download again some app data.

Unique solution ID: #1809

Author: Admin FAQ

Last update: 2015-06-10 12:03