

 
# Smartphones & Tablets | Windows™

## How can I delete a language pack ?

You can remove a language pack to free some storage space. Follow the steps below :


- On the tablet's homescreen, from the right edge of the screen, slide your finger left and select

### Settings > Modify the PC settings

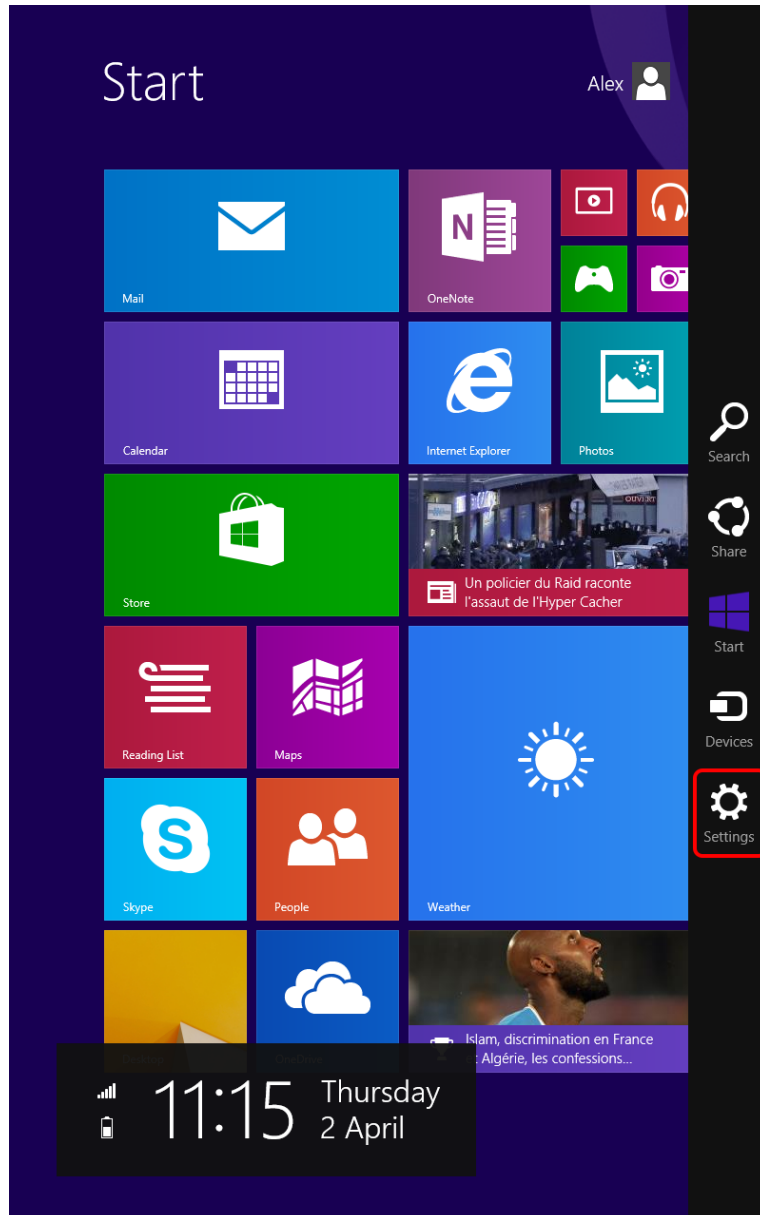

- Select **Time & language > Region & language**
- In the **Languages** section, select the language you want to delete then press **Remove**.

# Smartphones & Tablets | Windows™

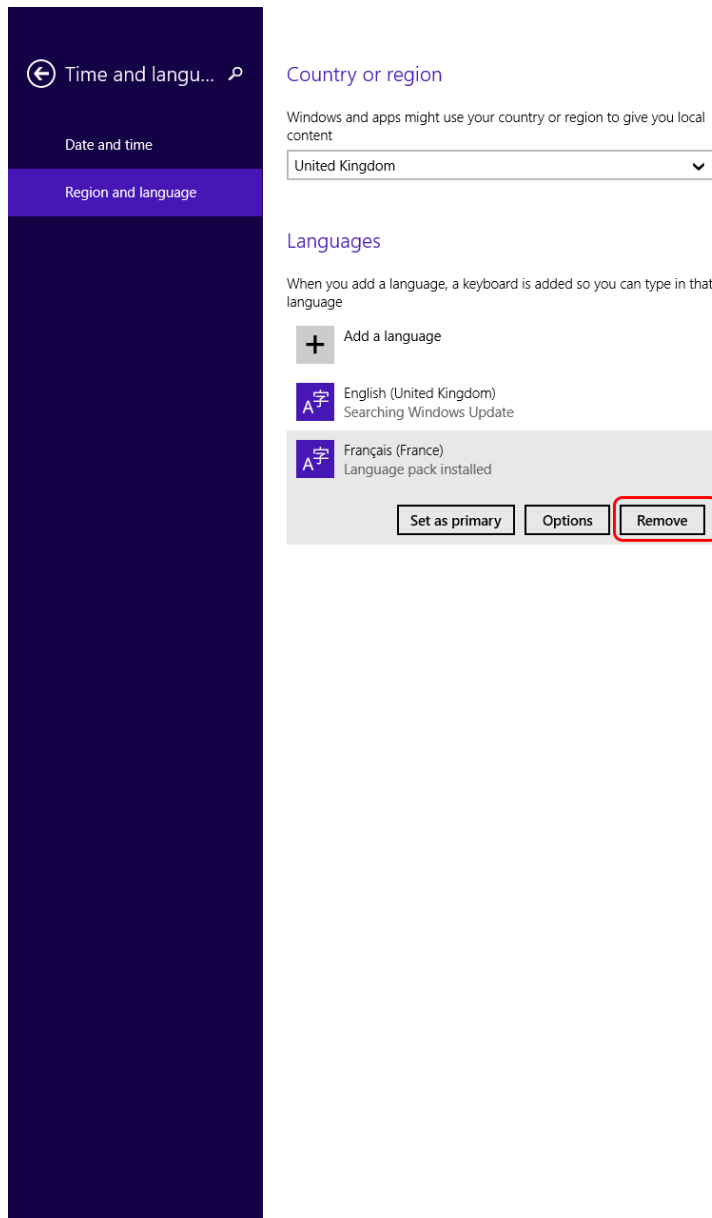 

When a language is set as main language of the device, you can't delete it straight off. First of all you should define another language as main language so that it becomes a secondary language. Once you have done this, you will be able to delete it.

For more information about the updates, go to the [Microsoft support departement](#).

Unique solution ID: #1750

Author: Admin FAQ

Last update: 2022-09-05 08:49