

Music Beany

Can I wash the Music Beany?

The Music Beany is hand washable, but only once the electronic components have been removed.

To remove the electronic components push the speaker elements one by one through the hole at the back of the beanie taking care with the cable.

Once you have washed and dried the beanie simply reinsert the speaker elements through the hole, taking care of putting the headphones the right way around and aligning them with the buttons correctly.



Archos cannot be held responsible for any breakage during the removal of the elements for washing.

Unique solution ID: #1665

Author: Admin FAQ

Last update: 2014-11-04 10:46