

Mini Cam

which way up should I place the Mini Cam?

The pairing button indicates the top of the minicam for the photos that it will take. To get a photo or video correctly orientated, the button must be at the top.

Unique solution ID: #1600

Author: Admin FAQ

Last update: 2014-10-15 16:51