




 



Android™ & Applications

Why it my tablet still vibrating when I press a key when I already turned off the option?

By default, pressing the touchscreen creates a vibration. This functionality is available in two parts: general interface and virtual keyboard. To completely remove vibrations of this type the option must be deactivated in both sections in the Settings app.

- In the **Settings** app  (or ) > **Sound** , uncheck Vibrate on touch.

- In the **Settings** app  (or ) >  **Language & Input**, in the section Keyboard & input methods, press  next to Google Keyboard (or the 3rd party keyboard that you are using) and uncheck Vibrate on keypress.

Unique solution ID: #1614

Author: Admin FAQ

Last update: 2014-11-14 16:59