


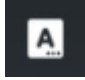


Android™ & Applications

Why do I have apps showing in another language in the Google Play™ store?

If the language set on your device is English, most of apps in the  Google Play™ store will be in English.

To change the device's language, go to **Settings**  (or ) >  **Language & input** and check **Language**. Select to modify it if necessary.

An app can be in a different language to the language on your device. It means that the developer didn't translate it in English.

Unique solution ID: #1533

Author: Admin FAQ

Last update: 2014-11-14 16:55