

Troubleshooting

[Music Beany] Why is my smart device asking for a pairing PIN?

When you pair the Music Beany for the first time no PIN number should be needed.

However if you unpair your Beany from your device, switching it off and back on your device may ask for a PIN number to re- pair your Beany. If this is the case enter **0000** to pair.

Unique solution ID: #1673

Author: Admin FAQ

Last update: 2014-11-04 11:44