

Archives

About ARCHOS 18d, 24d, 30c Vision



Operating Questions

What does the front button on my ARCHOS Vision do?

The front button on your device allows you to:

- turn on the device
- turn off the device
- lock the touchscreen
- go to the parent folder when navigating

To turn on the device, press the button for 2 seconds.

Note: you need first to slide the On/Off button to On.

To turn off the device, press the button for 2 seconds.

Two options are displayed: Lock and Power off.

Touch Power off to turn off.

To lock the device, press the button for 2 seconds.

Two options are displayed: Lock and Power off. Touch Lock to lock the touchscreen.

When the screen is locked, to turn off the device, you will need to unlock it first.

When navigating inside a menu, press the button to go up one level to the previous folder.

Archives

Unique solution ID: #1282

Author: Admin FAQ

Last update: 2015-05-05 16:49