

# HotKnot & Android Beam

## What is Android Beam and how to turn it on?

Android Beam allows a wireless data transfer between two devices using the NFC technology.

To activate Android Beam, go to the All Apps section  and open [Settings](#) >

**More**  .

Make sure that the NFC feature is [activated](#) and check the corresponding box.

Unique solution ID: #1926

Author: Admin FAQ

Last update: 2016-02-23 16:24