

# ARCHOS Smart Home app

## What is a program? How can i create / modify / delete a program?

Programs are the core of the Smart Home system. Thanks to programs, you can use many accessories through scenarios. For example, the opening of a door is the trigger for a photo to be taken and sent to you via email. A program is made of three steps: Trigger(s), Action, Schedule.


Go to the  **ARCHOS Smart Home** app and select the  **Programs** tab on the tab column, left.

### Creating a program

According to the accessories linked to your ARCHOS Smart Home Tablet, many options are available. Many types of programs can be set thanks to your accessories.

For example: You can program to take a picture when a designated door is opened and ask to send the picture via email to a specified person.

Please read the FAQs dealing with the accessories to see the different possibilities of programs.

On the Program tab's main page, press the  button up right. A new page is opened.

# ARCHOS Smart Home app

The screenshot displays the 'Program 1' configuration screen in the ARCHOS Smart Home app. The interface is divided into three main sections: Triggers, Action, and Schedule. The Triggers section shows 'No Trigger set' with a red '2' and an 'Add a Trigger' button. The Action section shows 'No Action set' with a red '3' and an 'Add an Action' button. The Schedule section shows two dropdown menus: 'Every day' with a red '4' and 'Always'. At the top right, a red '5' indicates 'Program not valid' with the message 'Need at least one trigger', and a 'CANCEL' button with a red '6' is visible.

## 1. Name your program

## 2. Set one or many triggers. It can be one or many.

## 3. Set one or many actions to occur according to the trigger(s).

## 4. Set the time when the action(s) should take place.

## 5. From this message, you know the program's status.

## 6. Select to cancel or save the program.

## Creating the program

Once you have named your program, you need to select one or many triggers.

- Select the button Add a trigger then select the accessory Movement Tag


# ARCHOS Smart Home app

that you have put on the door to be controlled.

Your Movement Tag can react in two ways: when the door is opened or in case of motion. Make sure to select the desired event.

- Select OK to save.

In this example, we have selected Door (1) because we want to be alerted when the door is opened (2). We confirm by selecting OK (3).

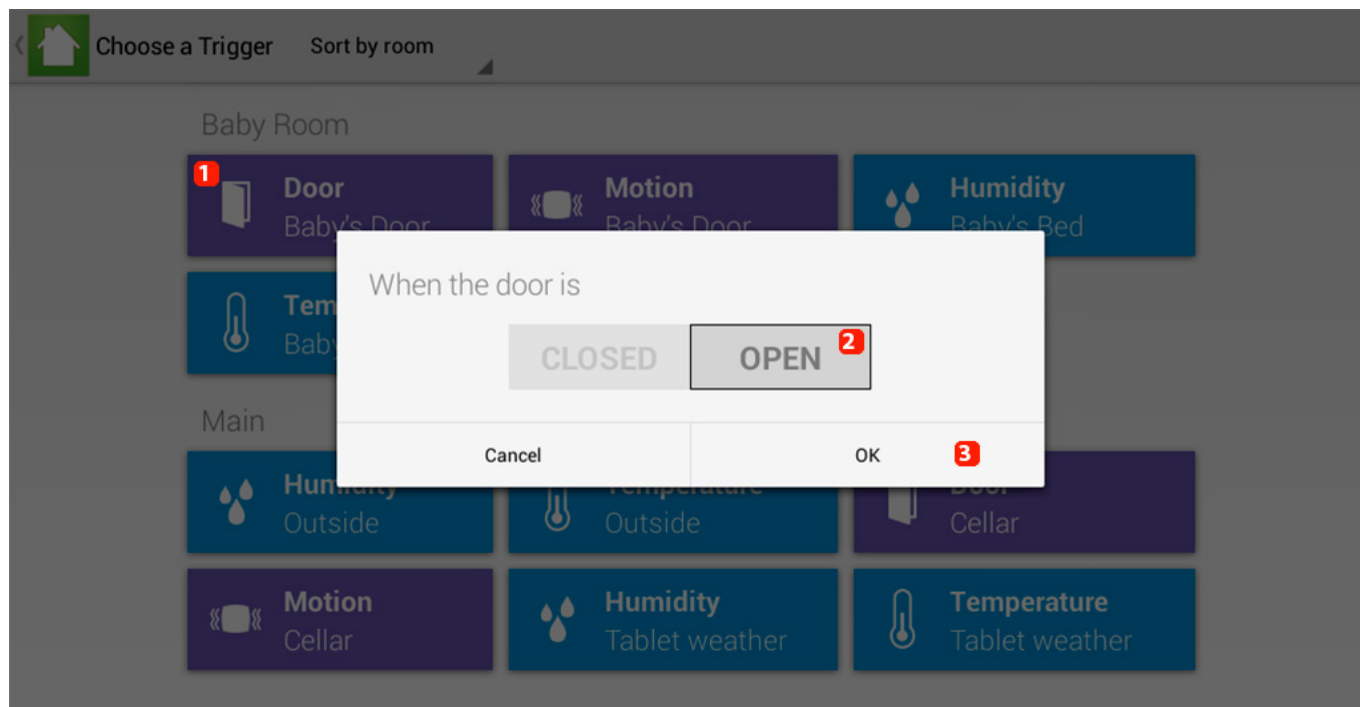

Now, select one or many actions. In this example, the different actions are taking a photo and sending an email :

- Press Add an Action and select Picture for the desired Mini Cam.
- Select Add an Action a second time so that an email can be sent with an enclosed picture. Select Mail and fill in the fields.

# ARCHOS Smart Home app

The screenshot shows a configuration screen for the ARCHOS Smart Home app. It features four input fields, each with a red numbered icon (1, 2, 3, 4) indicating a step in the process. The first field is labeled 'Account' and contains 'smtp.gmail.com'. The second field contains 'my-email@archos.com'. The third field contains 'Breach detected!'. The fourth field contains 'Someone came from the cellar, call 991!'. At the bottom, there are two buttons: 'Cancel' and 'OK'.

**1. Select which email account will send the alert. You can define it and add an account from the settings.**


**2. Email address receiving the alert.**

**3. Subject**

**4. Email content**


After the actions, you should set the schedule. You can choose among the weekdays and also in the time slot.

Once you have set all parameters, the message Program valid is displayed up right

if your program is OK. Select the  button up right.


The new program is ON by default. You can turn it off at any time from the **Programs** tab by selecting the ON button as followed.

# ARCHOS Smart Home app

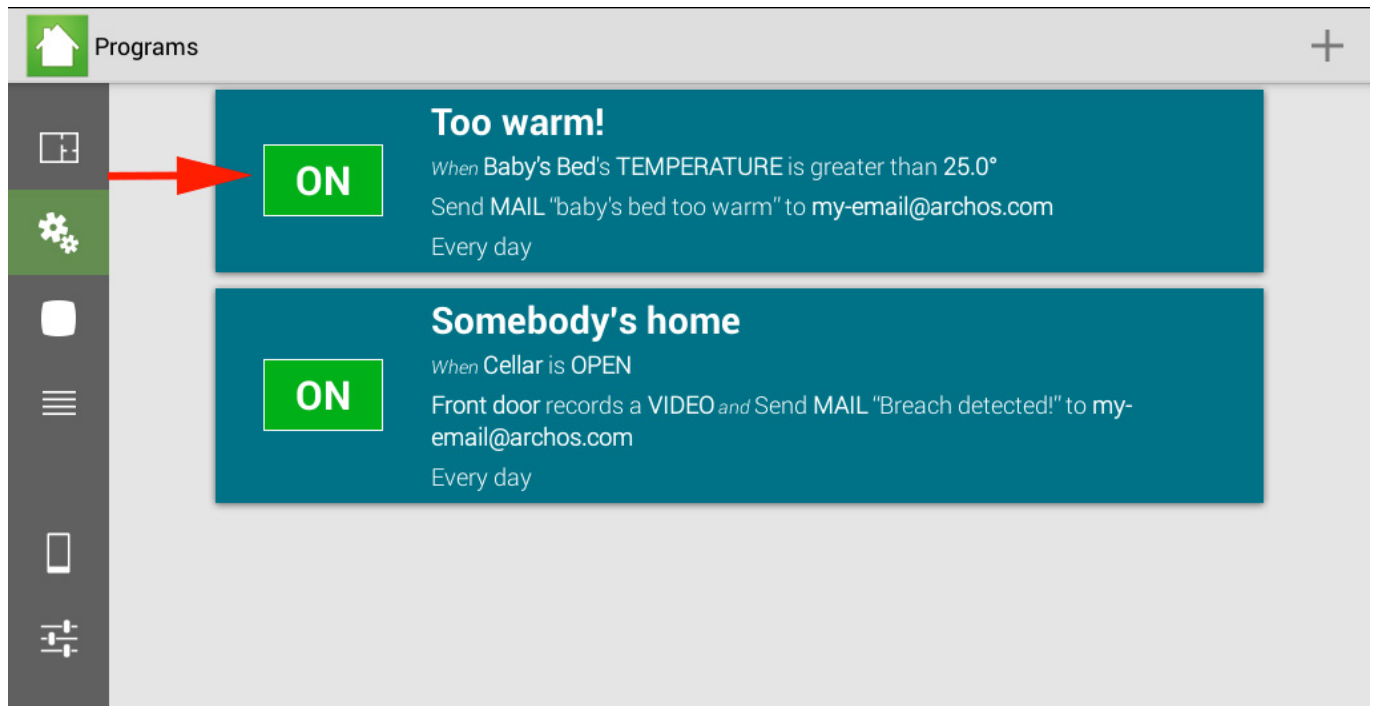

## Modifying/Deleting a program

To modify or delete an existing program, you have two solutions :

- Select directly the program you want to modify / delete. Press  up right to delete your program.
- Hold your finger on the program to display options.

✓ DONE **5** Too warm! **1**

**2**  EDIT **3**  DUPLICATE **4**  DELETE

**1. Name of your program**

**2. Press to modify your program**

**3. Press to duplicate your program**

**4. Press to delete your program**

Page 5 / 6

(c) 2024 ARCHOS <noreply@archos.com> | 2024-04-19 21:21

URL: <http://faq.archos.com//index.php?action=artikel&cat=158&id=223&artlang=en>

# ARCHOS Smart Home app

## 5. Press to save once you have modified the program.

Unique solution ID: #1381

Author: Admin FAQ

Last update: 2014-09-02 11:53