

# ARCHOS Smart Home app

## How do I delete a photo or video?



From the

**Rooms** menu, click on the item representing the camera (tablet or Mini Cam) that took the photo / video.

All your photos and videos are displayed here, long press on the ones you want to

delete and then press



to permanently delete a photo or video. You can also do a multiple selection if you want to delete several items at once.

Unique solution ID: #1585

Author: Admin FAQ

Last update: 2014-10-15 16:21