






Customization & Settings

How can I change the font size?

To increase or decrease the font size, go to  (or ) **Settings** >  **Display** and select Font size.

You can also increase the font size in  (or ) **Settings** >  **Accessibility** and tick Large text.

Unique solution ID: #1501

Author: Admin FAQ

Last update: 2014-11-14 16:14