


Connected Scale


How can I change the measurement unit on my Connected Scale?

You can change the measurement unit on the Connected Scale either from within the  **ARCHOS Connected Self** application or on the Connected Scale itself. The change on one is independent of the change on the other.


On the Connected Scale

To change the unit on the scale, simply press the button on the underside of the scale to switch through the different units. You can choose between kg (kilograms), lb (pounds) or st lb (stones).

Inside the ARCHOS Connected Self application

To change the unit in the application go to the settings section  from the top right of the app then choose Units. Here you can choose from kg (kilograms) or lb (pounds).

Connected Scale

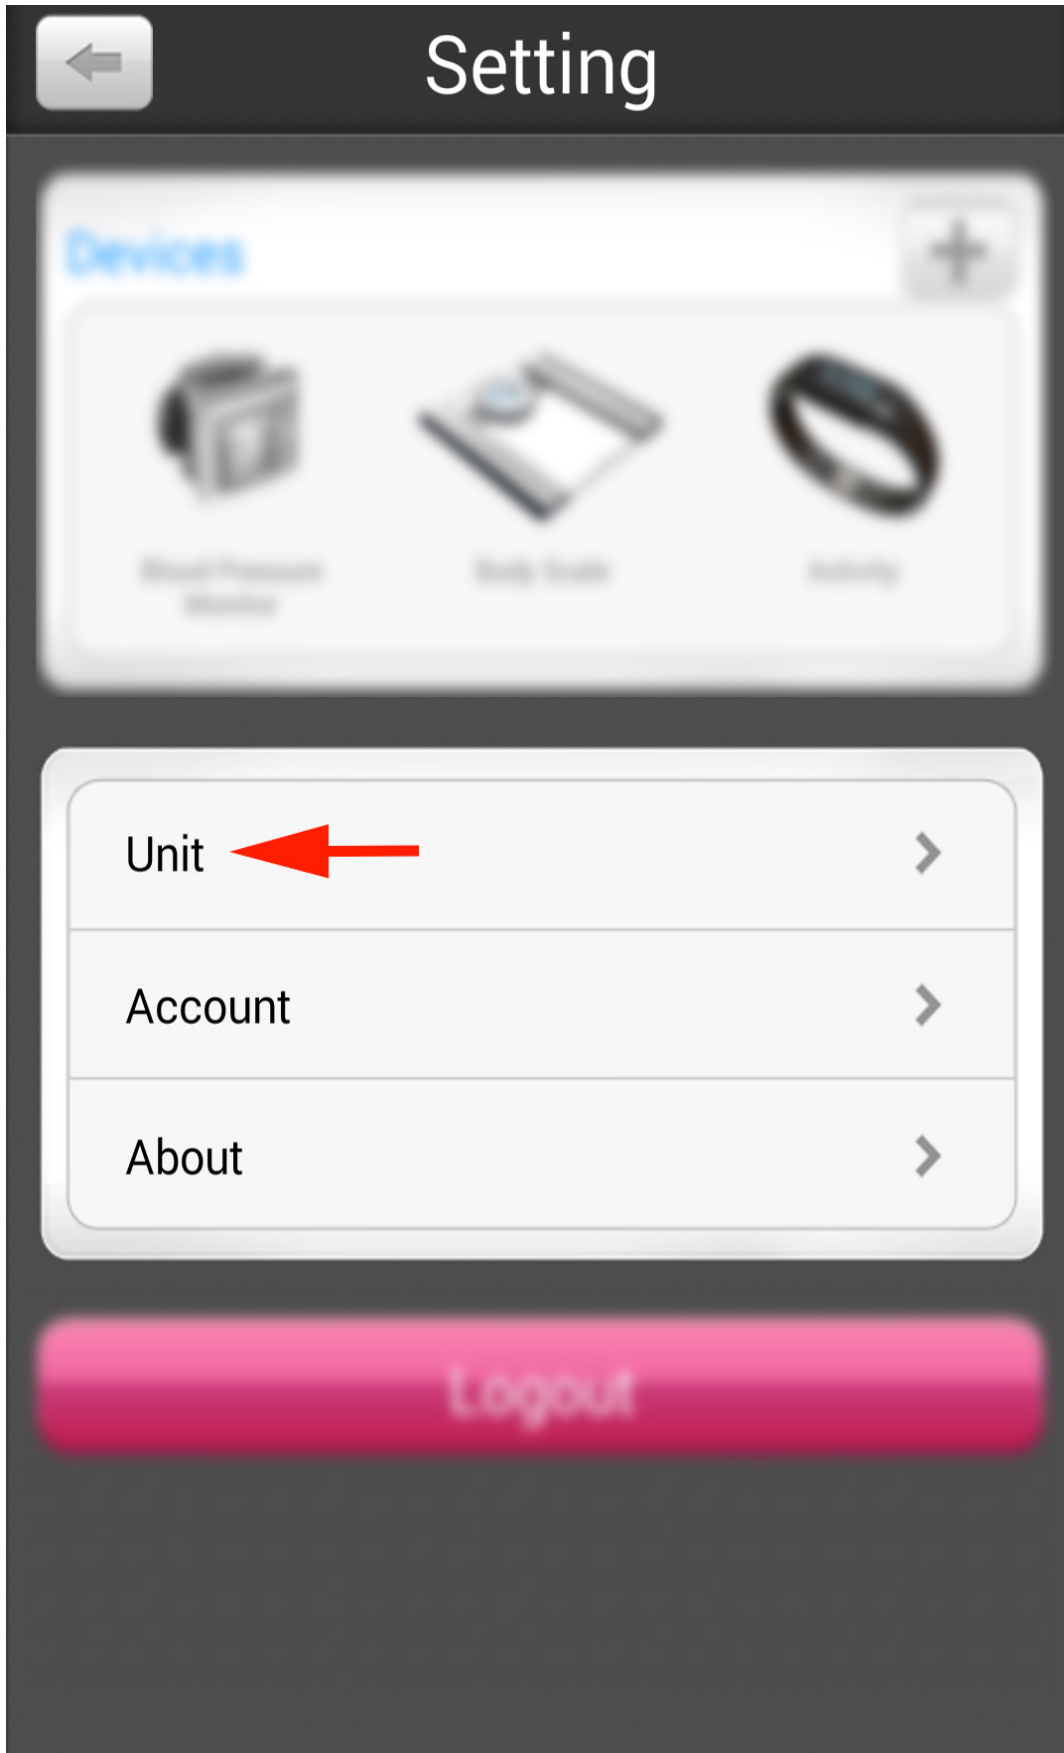

Unique solution ID: #1398
Author: Admin FAQ
Last update: 2014-09-02 11:40