






Connected Scale


How do I pair my Connected Scale with my Smart Device?

To pair your Connected Scale with your smart device you first of all need to launch the  **ARCHOS Connected Self** application and press the settings  button.

In the section dedicated to objects in your account press the  button then the  button to start pairing.

Once the pairing system has started on the application, you need to start the pairing on the Connected Scale. To do this press and hold the button on the underside of the Connected Scale for 6 seconds until the following logo is shown on the Connected Scales's screen.

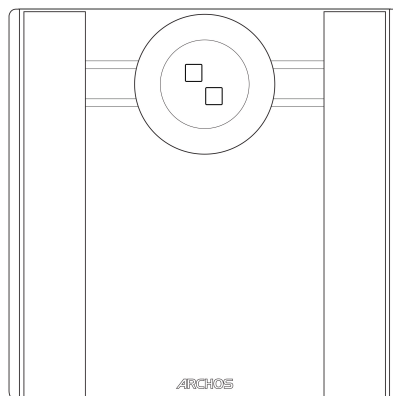

Your smart device should now detect the Connected Scale. If it doesn't press the  to start the pairing process again.

Then press the Connected Scale to pair the Connected Scale with the device, then wait until the pairing process has finished. If the pairing process fails, "E1" will be shown on the Connected Scale's screen, you should then restart the pairing procedure.

Connected Scale

Once your Connected Scale is paired, you will need to choose a user who will receive the data on synchronization.

Unique solution ID: #1397

Author: Admin FAQ

Last update: 2014-09-02 11:39